

**SHS12200  
(1KVA)**

**SHS24200  
(1KVA/2KVA/3KVA)**

**INVERTER / CHARGER  
User Manual**

# Table Of Contents

<b>ABOUT THIS MANUAL .....</b>	<b>1</b>
Purpose.....	1
Scope .....	1
<b>SAFETY INSTRUCTIONS.....</b>	<b>1</b>
<b>INTRODUCTION .....</b>	<b>2</b>
Features .....	2
Basic System Architecture .....	2
Product Overview.....	3
<b>OPERATION .....</b>	<b>4</b>
Power ON/OFF .....	4
Operation and Display Panel .....	4
LCD Display Icons .....	5
LCD Setting.....	7
Display Setting .....	13
Operating Mode Description .....	16
Fault Reference Code.....	17
Warning Indicator .....	18
<b>SPECIFICATIONS .....</b>	<b>19</b>
Table 1 Line Mode Specifications .....	19
Table 2 Inverter Mode Specifications .....	20
Table 3 Charge Mode Specifications .....	21
Table 4 General Specifications .....	22
<b>TROUBLE SHOOTING.....</b>	<b>23</b>
<b>Appendix: Approximate Back-up Time Table .....</b>	<b>24</b>

# ABOUT THIS MANUAL

## Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

## Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

# SAFETY INSTRUCTIONS



**WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.**

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuses (3 pieces of 40A, 32VDC for 1KVA, 4 pieces of 40A, 32VDC for 2KVA and 6 pieces for 3KVA, 1 piece of 200A, 58VDC for 4KVA and 5KVA) are provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

# INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

## Features

- Pure sine wave inverter
- Built-in MPPT solar charge controller
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function


## Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- Generator or Utility.
- PV modules (option)

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

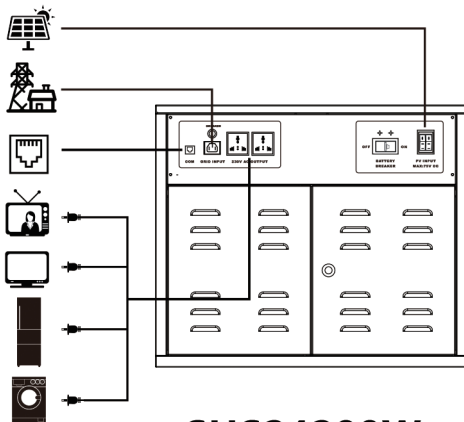


**SHS24200W**

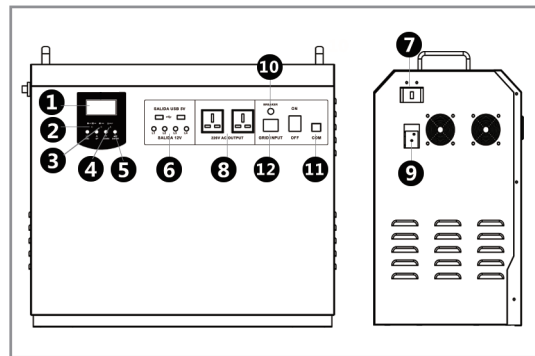

**SHS12200W**



# Product Overview

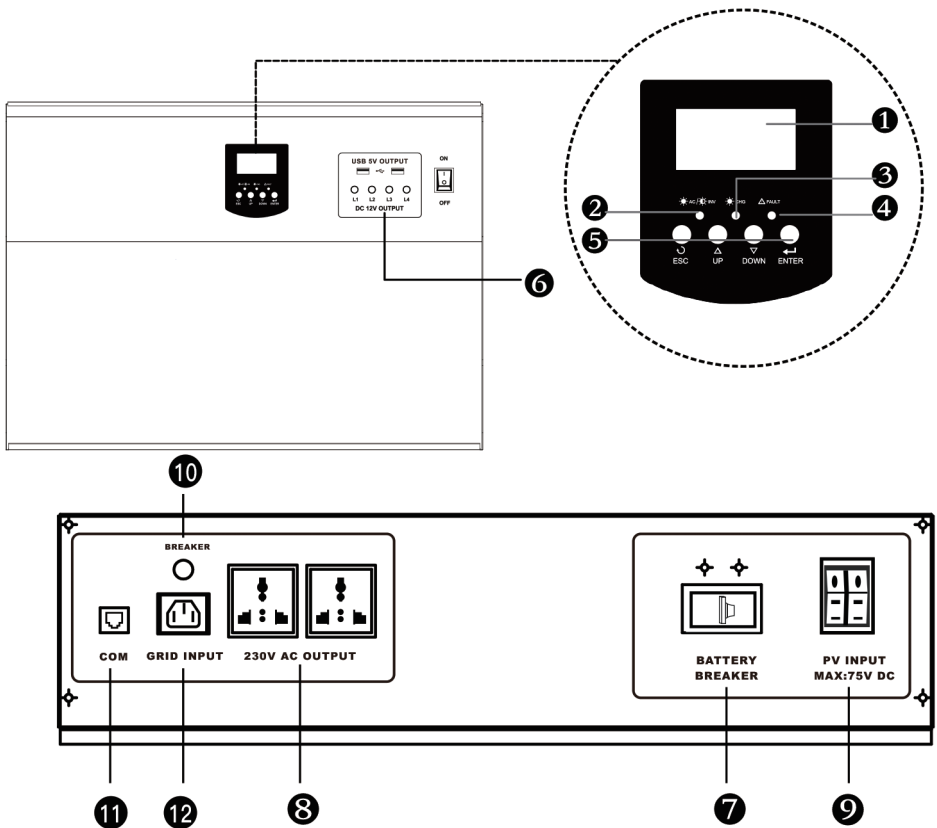

**NOTE:** For parallel model installation and operation, please check separate parallel installation guide for the details.


USB maximum output current : 1000mA x 2

DC maximum output current : 12V1A x 4

1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function buttons
6. Power on/off switch
7. Battery breaker
8. AC output
9. PV input
10. Circuit breaker
11. RS232 communication port
12. Grid Input

# OPERATION


## Power ON/OFF

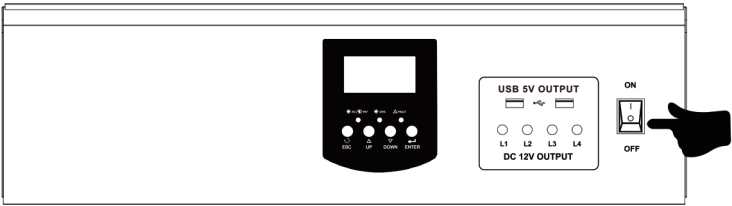

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

## Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

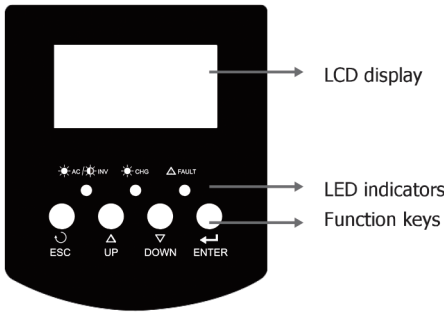


### LED Indicator







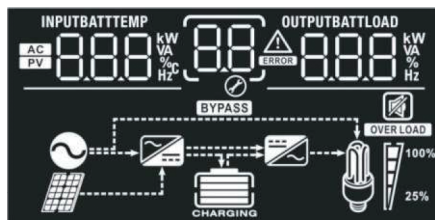


LED Indicator			Messages
AC / INV	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
CHG	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

























### Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

# LCD Display Icons



Icon	Function description	
Input Source Information		
	Indicates the AC input.	
	Indicates the PV input	
	Indicate input voltage, input frequency, PV voltage, battery voltage and charger current.	
Configuration Program and Fault Information		
	Indicates the setting programs.	
	Indicates the warning and fault codes.	
	Warning:	 flashing with warning code.
	Fault:	 lighting with fault code
Output Information		
	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.	
Battery Information		
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.	
In AC mode, it will present battery charging status.		
Status	Battery voltage	LCD Display
Constant Current mode / Constant Voltage mode	<2V/cell	4 bars will flash in turns.
	2 ~ 2.083V/cell	Bottom bar will be on and the other three bars will flash in turns.
	2.083 ~ 2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.
	> 2.167 V/cell	Bottom three bars will be on and the top bar will flash.
Floating mode. Batteries are fully charged.		4 bars will be on.

II present battery capacity.				
Load Percentage	Battery Voltage		LCD Display	
Load >50%	< 1.717V/cell			
	1.717V/cell ~ 1.8V/cell			
	1.8 ~ 1.883V/cell			
	> 1.883 V/cell			
50%> Load > 20%	< 1.817V/cell			
	1.817V/cell ~ 1.9V/cell			
	1.9 ~ 1.983V/cell			
	> 1.983			
Load < 20%	< 1.867V/cell			
	1.867V/cell ~ 1.95V/cell			
	1.95 ~ 2.033V/cell			
	> 2.033			
Load Information				
		Indicates overload.		
	Indicates the load level by 0-24%, 25-50%, 50-74% and 75-100%.			
	0%~25%	25%~50%	50%~75%	75%~100%
				
Mode Operation Information				
		Indicates unit connects to the mains.		
		Indicates unit connects to the PV panel.		
		Indicates load is supplied by utility power.		
		Indicates the utility charger circuit is working.		
		Indicates the DC/AC inverter circuit is working.		
Mute Operation				
		Indicates unit alarm is disabled.		























## LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting Programs:











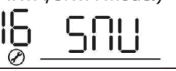



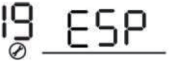
Program	Description	Selectable option
00	Exit setting mode	Escape 00 ESC
01	Output source priority: To configure load power source priority	Solar first 01 SOL
		Utility first (default) 01 UTI
		SBU priority 01 SBU
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	Available options in 1KVA 24V and 1KVA/3KVA 48V models:
		10A 02 10A
		20A (default) 02 20A
		Available options in 2-3KVA 24V models:
		20A 02 20A
		30A (default) 02 30A
		Available options in 2-3KVA 24V/48V Plus and 4-5KVA 48V models:

		lable for 2-3KVA 24V Plus)	20A 02 20A
		30A 02 30A	40A 02 40A
		50A 02 50A	60A (default) 02 60A
03	AC input voltage range	Appliances (default) 03 APL	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS 03 UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.
04	Power saving mode enable/disable	Saving mode disable (default) 04 SDS	If disabled, no matter connected load is low or high, the on/off status of inverter output will not be effected.
		Saving mode enable 04 SEN	If enabled, the output of inverter will be off when connected load is pretty low or not detected.
05	Battery type	AGM (default) 05 AGM	Flooded 05 FLD
		User-Defined 05 USE	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
06	Auto restart when overload occurs	Restart disable (default) 06 LFD	Restart enable 06 LFE
07	Auto restart when over temperature occurs	Restart disable (default) 07 LFD	Restart enable 07 LFE
08	Output voltage (only available for 120Vac models)	110V 08 110 <sup>v</sup>	120V (default) 08 120 <sup>v</sup>
09	Output frequency	50Hz (default) 09 50 <sub>Hz</sub>	60Hz 09 60 <sub>Hz</sub>

11	Maximum utility charging current	lable options in 1KVA 24V and 2KVA 24V Plus 120Vac model:	
		10A 	20A(default): 
		Available options in 2-3KVA 24V and 2-3KVA 24V Plus models:	
		20A 	30A (default) 
		Available options in 1KVA/3KVA 48V and 2-3KVA 48V Plus models:	
		10A 	15A(default): 
		Available options in 2KVA 48V Plus 120Vac model:	
		5A 	10A(default) 
		Available options in 4KVA/5KVA 48V models:	
		2A 	10A 
		20A 	30A (default) 
12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	Available options in 24V models:	
		22.0V 	22.5V 
		23.0V (default) 	23.5V 
		24.0V 	24.5V 
		25.0V 	25.5V 
		Available options in 48V models:	
		44V 	45V 

13		Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" in program 01.	It)	47V
			48V	49V
			50V	51V
			Available options in 24V models:	
			Battery fully charged	24V
			24.5V	25V
			25.5V	26V
			26.5V	27V (default)
			27.5V	28V
			28.5V	29V
			Available options in 48V models:	
			Battery fully charged	48V
			49V	50V

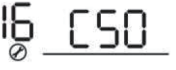

			
		53V 	54V (default) 
		55V 	56V 
		57V 	58V 
16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Utility first 	Utility will charge battery as first priority. Solar energy will charge battery only when utility power is not available.
		Solar and Utility (Only available for 4KVA/5KVA model) 	Solar energy and utility will charge battery at the same time.
		Only Solar 	Solar energy will be the only charger source no matter utility is available or not.
		If this inverter/charger is working in Battery mode or Power saving mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
18	Alarm control	Alarm on (default) 	Alarm off 
19	Auto return to default display screen	Return to default display screen (default) 	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.







		latest screen 19 LEP	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 20 LON	Backlight off 20 LOF
22	Beeps while primary source is interrupted	Alarm on (default) 22 AON	Alarm off 22 AOF
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 23 byd	Bypass enable 23 byE
25	Record Fault code	Record enable 25 FEN	Record disable (default) 25 FdS
26	Bulk charging voltage (C.V voltage)	24V model default setting: 28.2V CU 26 28.2 <sup>BATT</sup> V	
		48V model default setting: 56.4V CU 26 56.4 <sup>BATT</sup> V	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 24.0V to 29.2V for 24V model and 48.0V to 58.4V for 48V model. Increment of each click is 0.1V.	
27	Floating charging voltage	24V model default to 27.0V FLU 27 27.0 <sup>BATT</sup> V	
		48V model default setting: 54.0V FLU 27 54.0 <sup>BATT</sup> V	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 24.0V to 29.2V for 24V model, 48.0V to 58.4V for 48V model. Increment of each click is 0.1V.	
29	Low DC cut-off voltage	24V model default setting: 21.0V COU 29 21.0 <sup>BATT</sup> V	
		48V model default setting: 42.0V COU 29 42.0 <sup>BATT</sup> V	





		<p>If-defined is selected in program 5, this program can be set up. Setting range is from 20.0V to 24.0V for 24V model, 40.0V to 48.0V for 48V model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.</p>
--	--	--

## Display Setting





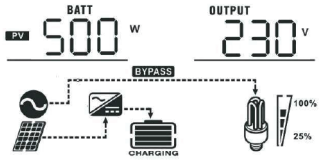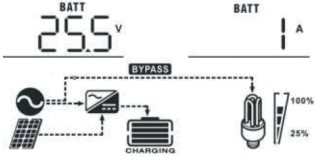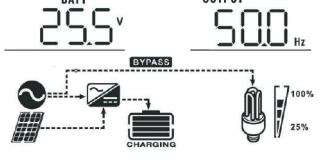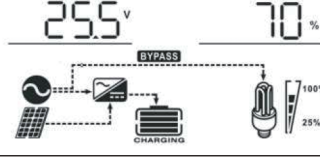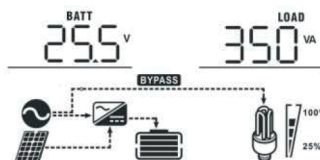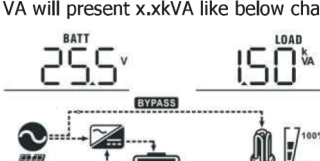

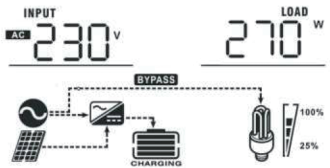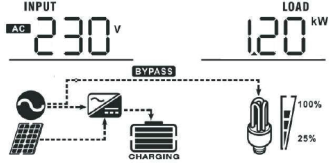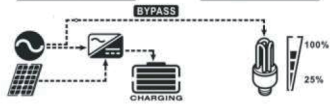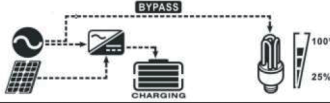
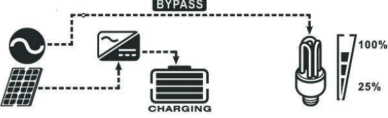
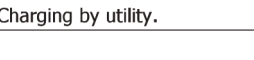
The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, MPPT charging current, MPPT charging power, battery voltage, output voltage, output frequency, load percentage, load in VA, load in Watt, DC discharging current, main CPU Version and second CPU Version.

Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	<p>Input Voltage=230V, output voltage=230V</p>
Input frequency	<p>Input frequency=50Hz</p>
PV voltage	<p>PV voltage=60V</p>
MPPT Charging current	<p>Current <math>\geq 10A</math></p> <p>Current &lt; 10A</p>

	
Battery voltage/ DC discharging current	<p>Battery voltage=25.5V, discharging current=1A</p> 
Output frequency	<p>Output frequency=50Hz</p> 
Load percentage	<p>Load percent=70%</p> 
Load in VA	<p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p>  <p>When load is larger than 1kVA ( 1KVA), load in VA will present x.xkVA like below chart.</p> 

	<p>load is lower than 1kW, load in W will present xxxW like below chart.</p>  <p>When load is larger than 1kW ( 1KW), load in W will present x.xkW like below chart.</p> 
Main CPU version checking	<p>Main CPU version 00014.04</p> 
Secondary CPU version checking	<p>Secondary CPU version 00003.03</p> 

# Operating Mode Description

Operation mode	Description	LCD display
Standby mode / Power saving mode <b>Note:</b> *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. *Power saving mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.	No output is supplied by the unit but it still can charge batteries.	Charging by utility. 
		Charging by PV energy. 
		No charging. 
Fault mode <b>Note:</b> *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	PV energy and utility can charge batteries.	Charging by utility. (Only available in 1K/2K/3K model) 
		Charging by PV energy. 
		No charging. 
Fault mode <b>Note:</b> *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	Utility can power loads when the unit starts up without battery. (Only available in 4K/5K model with single operation)	Power from utility 
Line Mode	The unit will provide output power from the mains. It will also charge the battery at line mode.	Charging by PV energy 
		Charging by utility. 









Battery Mode	The unit will provide output power from battery and PV power.	
		<p>Power from battery only.</p>

## Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature	
03	Battery voltage is too high	
04	Battery voltage is too low	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is abnormal. (For 1K/2K/3K model) Output voltage is too high. (For 4K/5K model)	
07	Overload time out	
08	Bus voltage is too high	
09	Bus soft start failed	
11	Main relay failed	
51	Over current or surge	
52	Bus voltage is too low	
53	Inverter soft start failed	
55	Over DC voltage in AC output	
56	Battery connection is open	
57	Current sensor failed	
58	Output voltage is too low	

**NOTE:** Fault codes **51, 52, 53, 55, 56, 57 and 58** are only available in 4K/5K model.

## Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
03	Battery is over-charged	Beep once every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
12	Solar charger stops due to low battery.		
13	Solar charger stops due to high PV voltage.		
14	Solar charger stops due to overload.		



# SPECIFICATIONS

Table 1 Line Mode Specifications

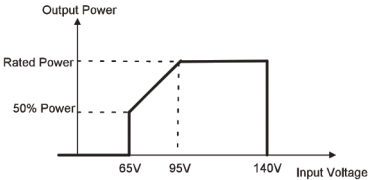
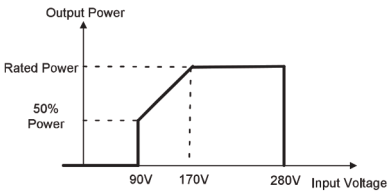
INVERTER MODEL	SHS24200	1KVA 24V 2KVA 24V 3KVA 24V	SHS12200 1KVA 12V
Input Voltage Waveform	Sinusoidal (utility or generator)		
Nominal Input Voltage	230Vac		
Low Loss Voltage	170Vac±7V (UPS) 90Vac±7V (Appliances)		
Low Loss Return Voltage	180Vac±7V (UPS); 100Vac±7V (Appliances)		
High Loss Voltage	280Vac±7V		
High Loss Return Voltage	270Vac±7V		
Max AC Input Voltage	300Vac		
Nominal Input Frequency	50Hz / 60Hz (Auto detection)		
Low Loss Frequency	40±1Hz		
Low Loss Return Frequency	42±1Hz		
High Loss Frequency	65±1Hz		
High Loss Return Frequency	63±1Hz		
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits		
Efficiency (Line Mode)	>95% ( Rated R load, battery full charged )		
Transfer Time	10ms typical (UPS); 20ms typical (Appliances)		
Output power derating: When AC input voltage drops to 95V or 170V depending on models, the output power will be derated.	<div>120Vac model:</div> <div></div> <div>230Vac model:</div> <div></div>		

Table 2 Inverter Mode Specifications

INVERTER MODEL	1KVA 24V	SHS12200
	SHS24200 2KVA 24V 3KVA 24V	1KVA 12V
<b>Rated Output Power</b>	1KVA/0.8KW 2KVA/1.6KW 3KVA/2.4KW	1KVA/0.8KW
<b>Output Voltage Waveform</b>	Pure Sine Wave	Pure Sine Wave
<b>Output Voltage Regulation</b>	230Vac±5%	230Vac±5%
<b>Output Frequency</b>	50Hz	50Hz
<b>Peak Efficiency</b>	90%	90%
<b>Overload Protection</b>	5s@≥150% load; 10s@110%~150% load	
<b>Surge Capacity</b>	2* rated power for 5 seconds	
<b>Nominal DC Input Voltage</b>	24Vdc	12Vdc
<b>Cold Start Voltage</b>	23.0Vdc	11.5Vdc
<b>Low DC Warning Voltage</b>		
@ load < 20%	22.0Vdc	11.0Vdc
@ 20% ≤ load < 50%	21.4Vdc	10.7Vdc
@ load ≥ 50%	20.2Vdc	10.1Vdc
<b>Low DC Warning Return Voltage</b>		
@ load < 20%	23.0Vdc	11.5Vdc
@ 20% ≤ load < 50%	22.4Vdc	11.2Vdc
@ load ≥ 50%	21.2Vdc	10.6Vdc
<b>Low DC Cut-off Voltage</b>		
@ load < 20%	21.0Vdc	10.5Vdc
@ 20% ≤ load < 50%	20.4Vdc	10.2Vdc
@ load ≥ 50%	19.2Vdc	9.6Vdc
<b>High DC Recovery Voltage</b>	29Vdc	14.5Vdc
<b>High DC Cut-off Voltage</b>	31Vdc	15.5Vdc
<b>No Load Power Consumption</b>	<25W	<15W
<b>Saving Mode Power Consumption</b>	<10W	<5W

Table 3 Charge Mode Specifications

Utility Charging Mode			
<b>INVERTER MODEL</b>		<b>1KVA 24V 2KVA 24V 3KVA 24V</b>	<b>1KVA 12V</b>
<b>Charging Current (UPS) @ Nominal Input Voltage</b>		20/30A	10/20A
<b>Bulk Charging Voltage</b>	<b>Flooded Battery</b>	29.2	14.6
	<b>AGM / Gel Battery</b>	28.2	14.1
<b>Floating Charging Voltage</b>		27Vdc	13.5Vdc
<b>Charging Algorithm</b>		3-Step	3-Step
<b>Charging Curve</b>		<p>Battery Voltage, per cell</p> <p>2.43Vdc (2.35Vdc) 2.25Vdc</p> <p>Charging Current, %</p> <p>100% 50%</p> <p>Time</p> <p>Bulk (Constant Current)      Absorption (Constant Voltage)      Maintenance (Floating)</p> <p><math>T_0</math>      <math>T_1 = 10 * T_0</math>, minimum 10mins, maximum 8hrs</p>	

Solar Charging Mode			
<b>INVERTER MODEL</b>		<b>1KVA 24V 2KVA 24V 3KVA 24V</b>	<b>1KVA 12V</b>
<b>Rated Power</b>	600W		600W
<b>PV Charge Current</b>	25A		50A
<b>Efficiency</b>	98.0% max.		96.5% max
<b>Max. PV Array Open Circuit Voltage</b>	75Vdc max		40dc max
<b>PV Array MPPT Voltage Range</b>	30~66Vdc		15~18Vdc
<b>Min battery voltage for PV charge</b>	17Vdc		15Vdc
<b>Standby Power Consumption</b>	2W		1W
<b>Battery Voltage Accuracy</b>	+/-0.3%		+/-0.3%
<b>PV Voltage Accuracy</b>	+/-2V		+/-1V
<b>Charging Algorithm</b>	3-Step		3-Step

Table 4 General Specifications

<b>INVERTER MODEL</b>	<b>SHS24200</b> <b>1KVA 24V</b> <b>2KVA 24V</b> <b>3KVA 24V</b>	<b>SHS12200</b> <b>1KVA 12V</b>
<b>Safety Certification</b>	CE	
<b>Operating Temperature Range</b>	0°C to 55°C	
<b>Storage temperature</b>	-15°C~ 60°C	
<b>Dimension (D*W*H), mm</b>	535X550X570MM	557.8X299X560MM
<b>Net Weight, kg</b>	24.5KG/25KG/25.5KG	14.5KG

# TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Battery polarity is connected reversed.	1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C. (Only available for 1-3KVA models.)	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C.	
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	
	Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.

# Appendix: Approximate Back-up Time Table

Model	Load (VA)	Backup Time @24Vdc 100Ah (min)	Backup Time @24Vdc 200Ah (min)
1KVA	200	766	1610
	400	335	766
	600	198	503
	800	139	339
	1000	112	269
2KVA	200	766	1610
	400	335	766
	600	198	503
	800	139	339
	1000	112	269
	1200	95	227
	1400	81	176
	1600	62	140
	1800	55	125
	2000	50	112
3KVA	300	449	1100
	600	222	525
	900	124	303
	1200	95	227
	1500	68	164
	1800	56	126
	2100	48	108
	2400	35	94
	2700	31	74
	3000	28	67

Model	Load (VA)	Backup Time @ 48Vdc 100Ah (min)	Backup Time @ 48Vdc 200Ah (min)
1KVA	100	2529	5058
	200	1264	2529
	300	843	1686
	400	608	1279
	500	482	1035
	600	406	872
	700	310	710
	800	268	615
	900	231	540
	1000	186	471

Model	Load (VA)	Backup Time @ 48Vdc 100Ah (min)	Backup Time @ 48Vdc 200Ah (min)
2KVA	200	1581	3161
	400	751	1581
	600	491	1054
	800	331	760
	1000	268	615
	1200	221	508
	1400	172	387
	1600	136	335
	1800	120	295
	2000	106	257
3KVA	300	1054	2107
	600	491	1054
	900	291	668
	1200	196	497
	1500	159	402
	1800	123	301
	2100	105	253
	2400	91	219
	2700	71	174
	3000	63	155

**Note:** Backup time depends on the quality of the battery, age of battery and type of battery.  
Specifications of batteries may vary depending on different manufacturers.